




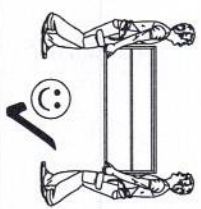

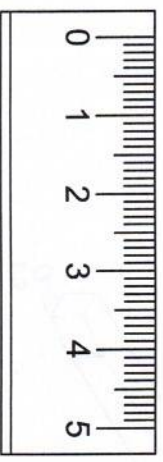


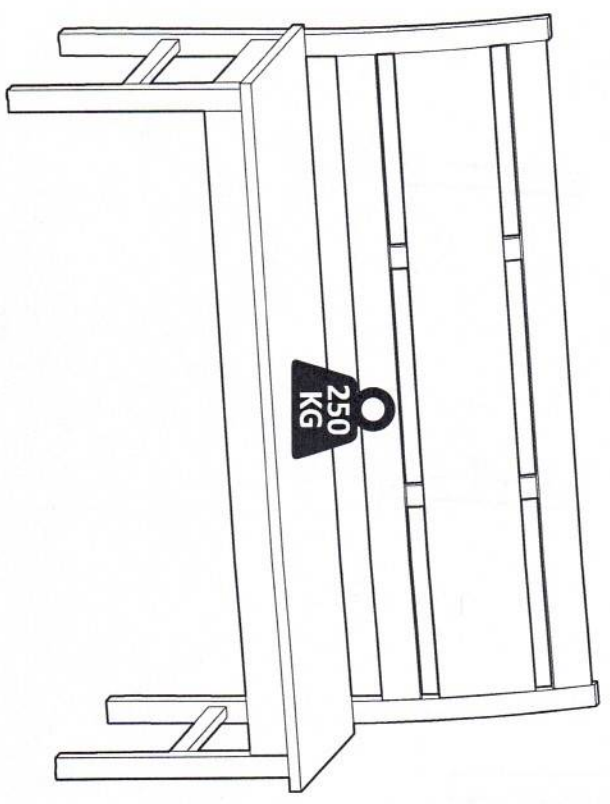
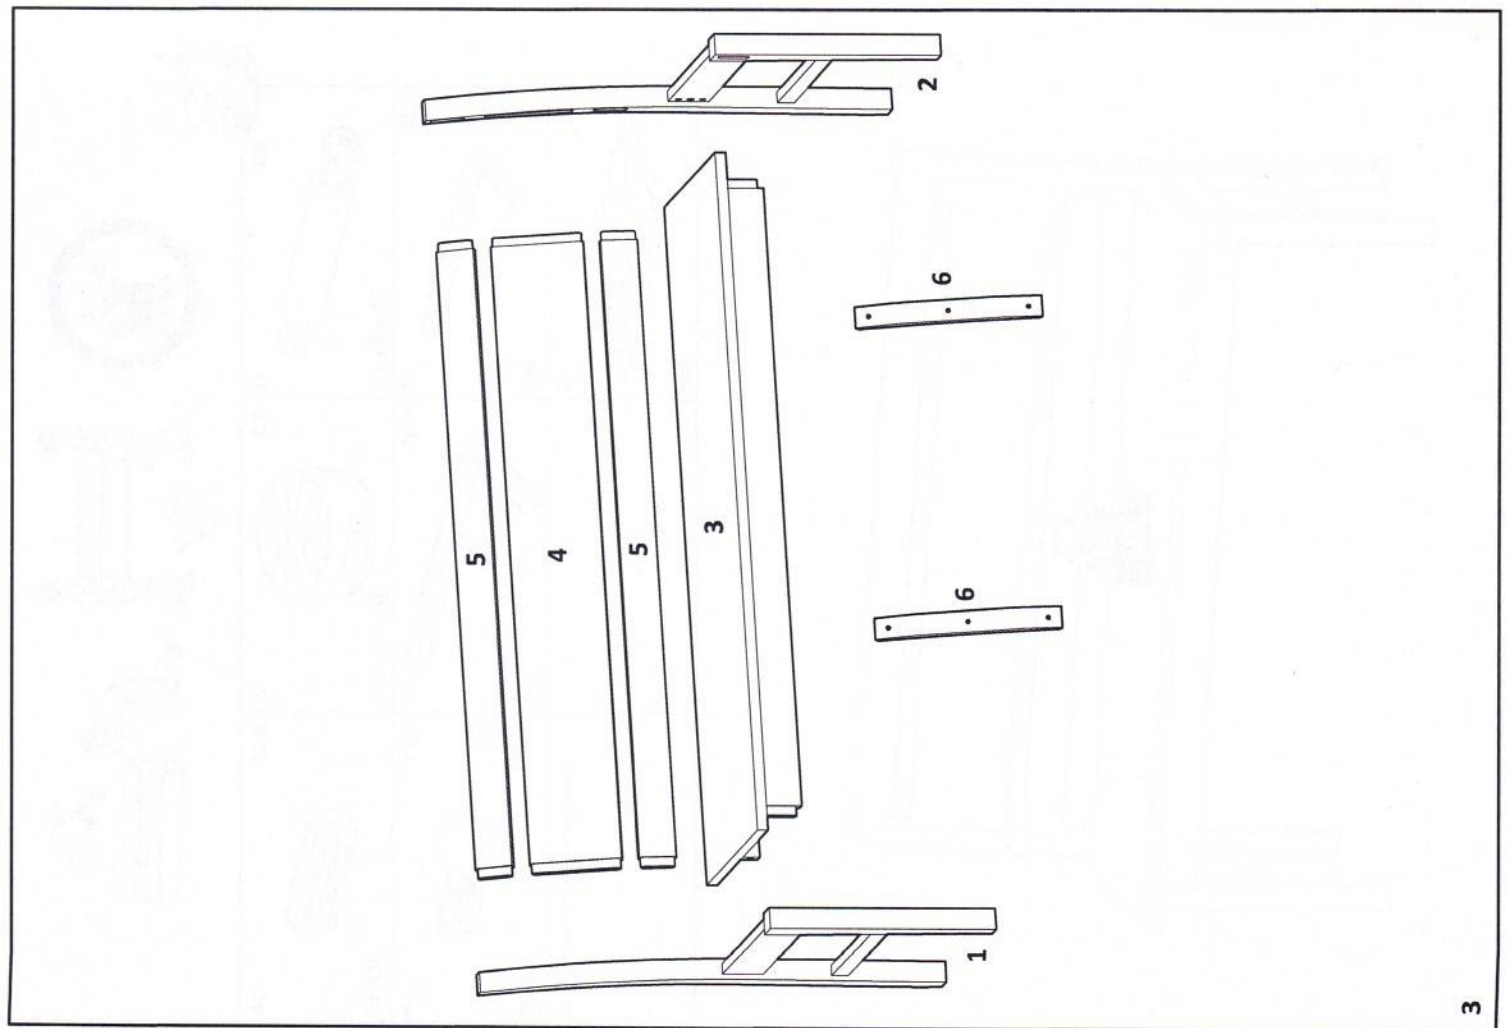
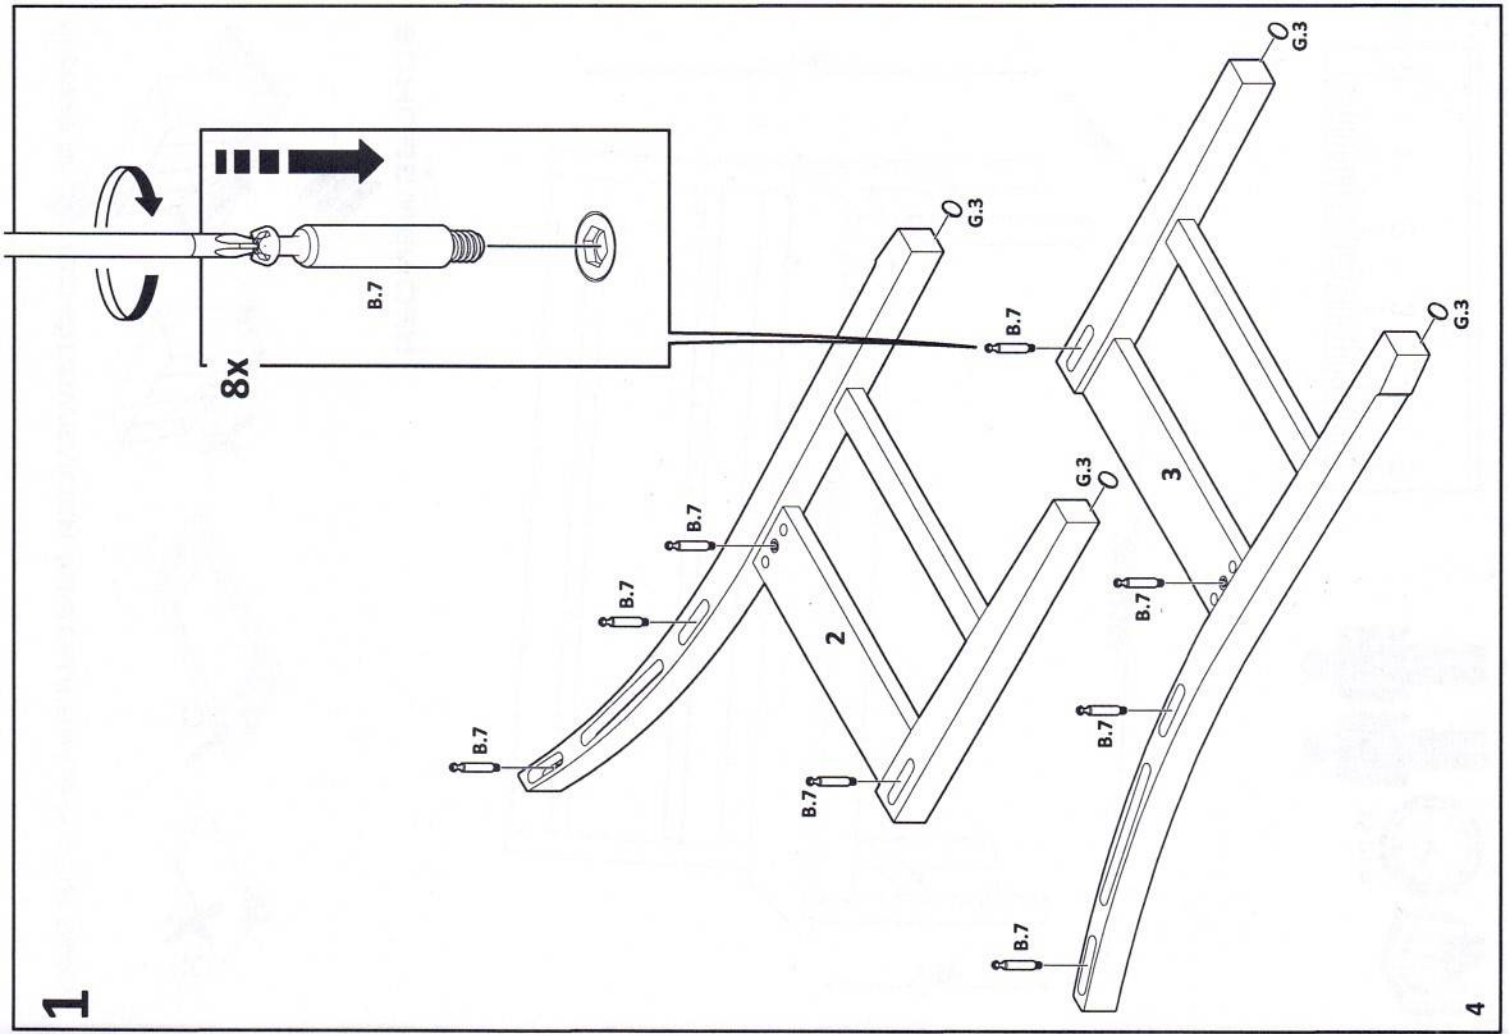


SCHÖSSWENDER
MOBEL



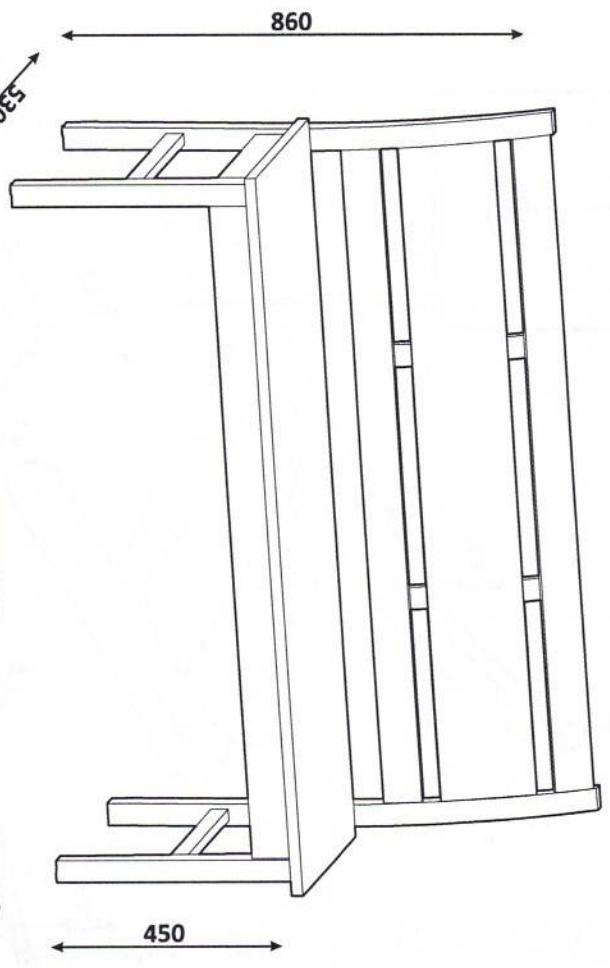


<p>B.7 x8 Maxifix Ø9</p> 	<p>B.8 x8 Maxifix Ø35</p> 	<p>B.13 x4 Ø12x40</p> 
<p>B.50 x1 №4</p> 	<p>B.51 x1 №6</p> 	<p>E.33 x6 M6x20</p> 
<p>G.3 x1 Ø20</p> 		










2

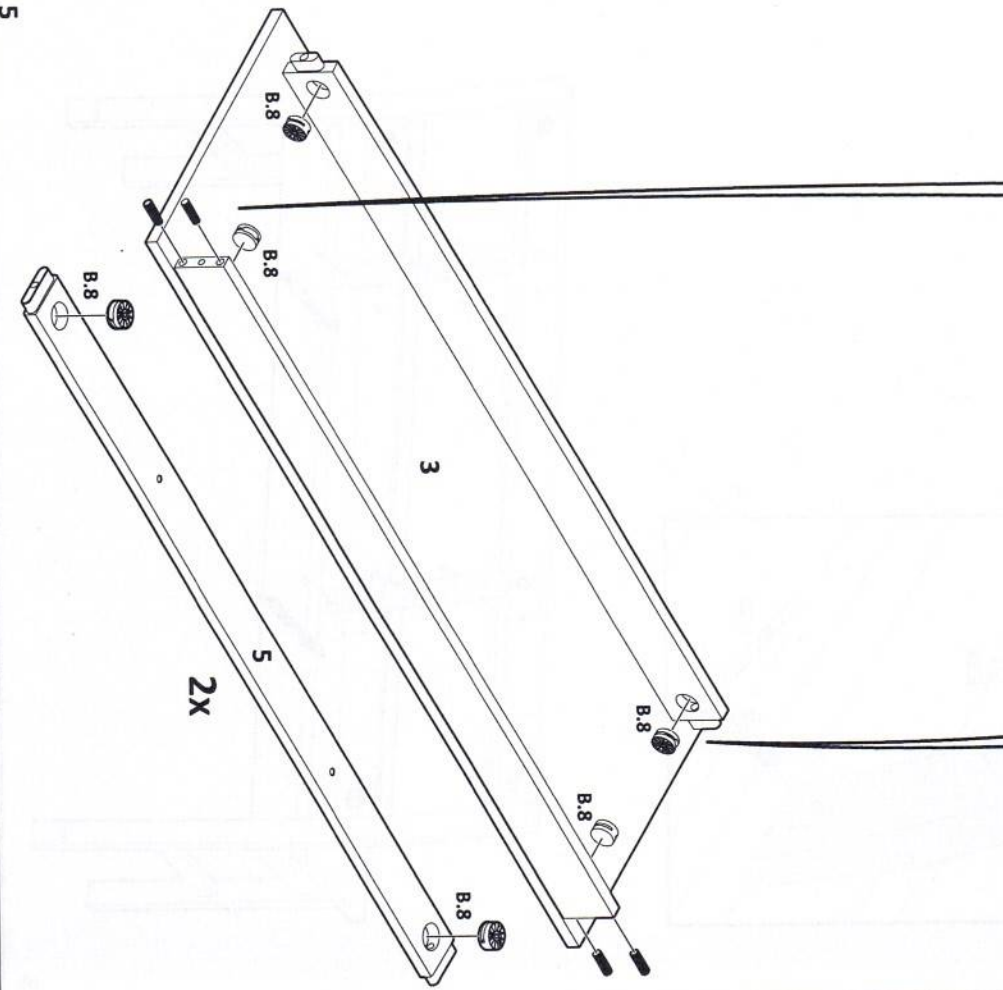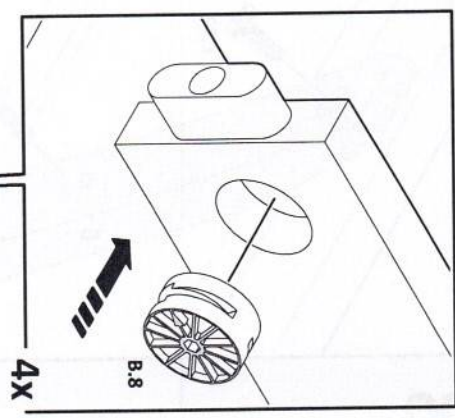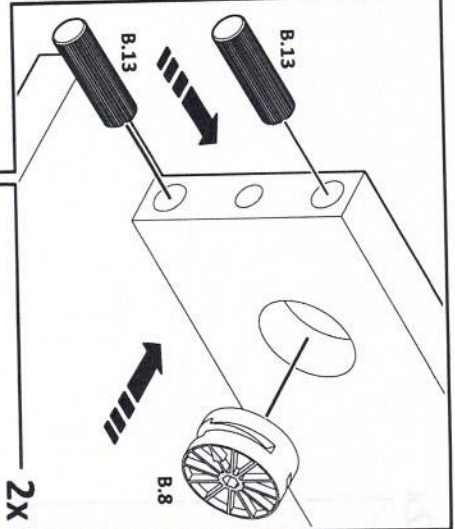


3

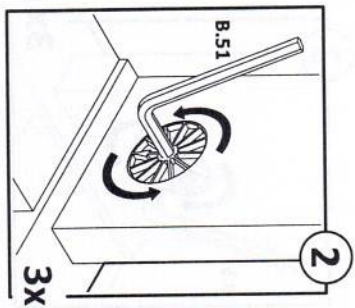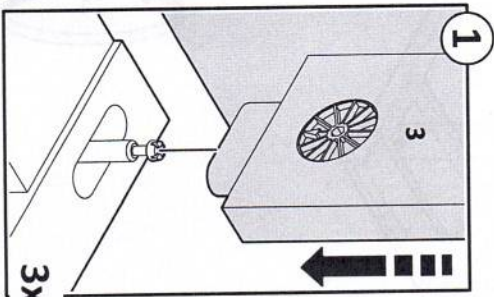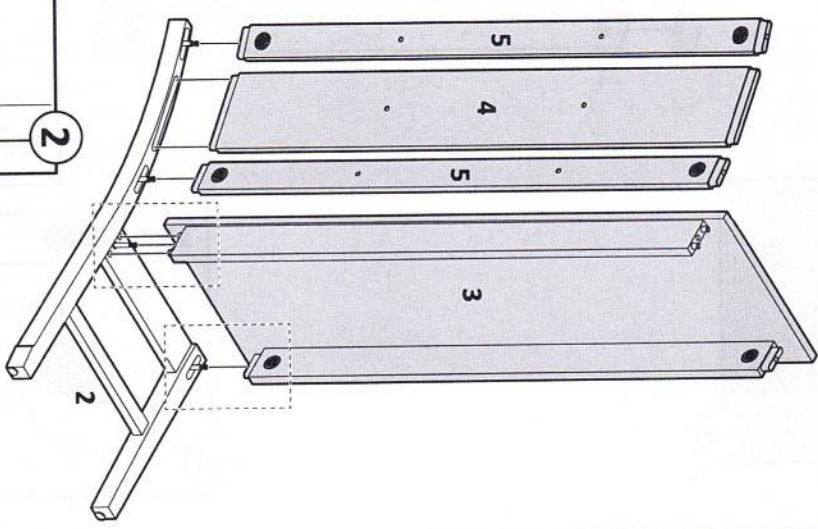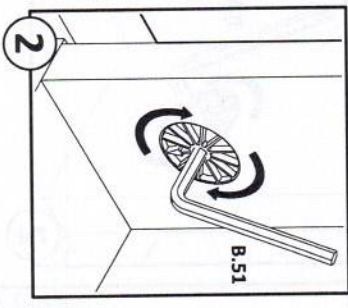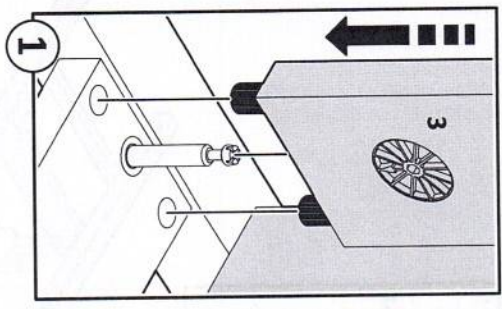


6






5

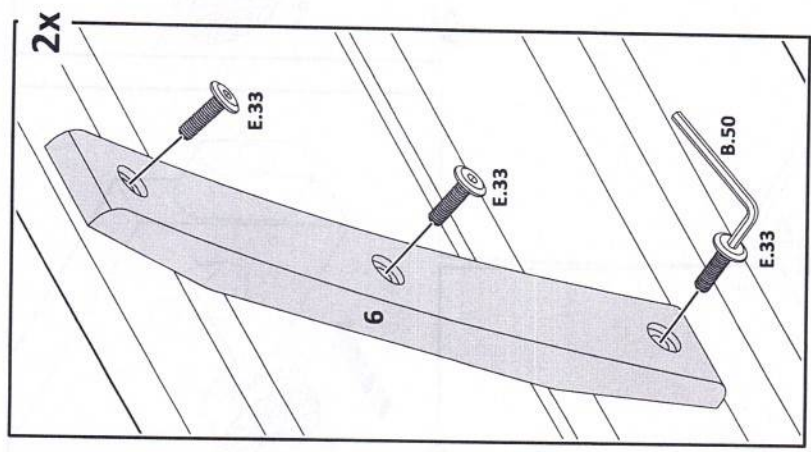

5

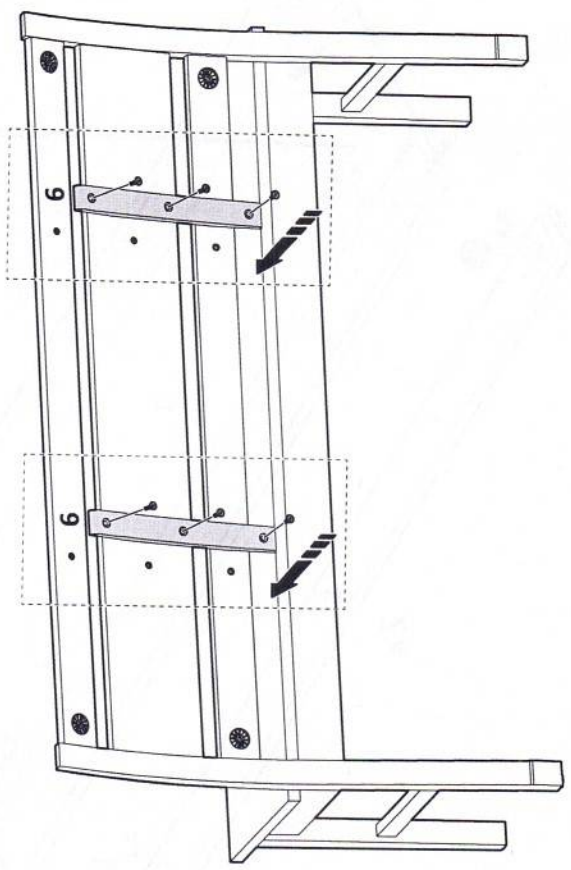

8

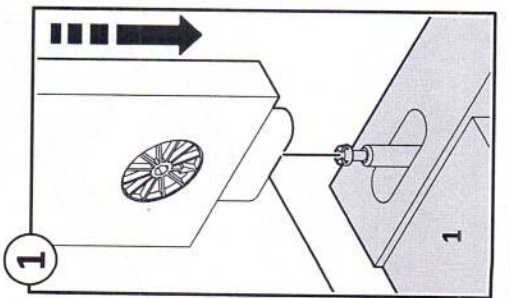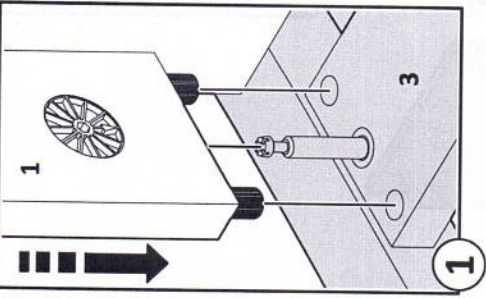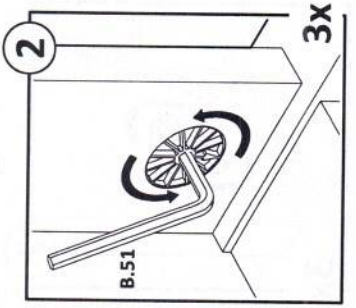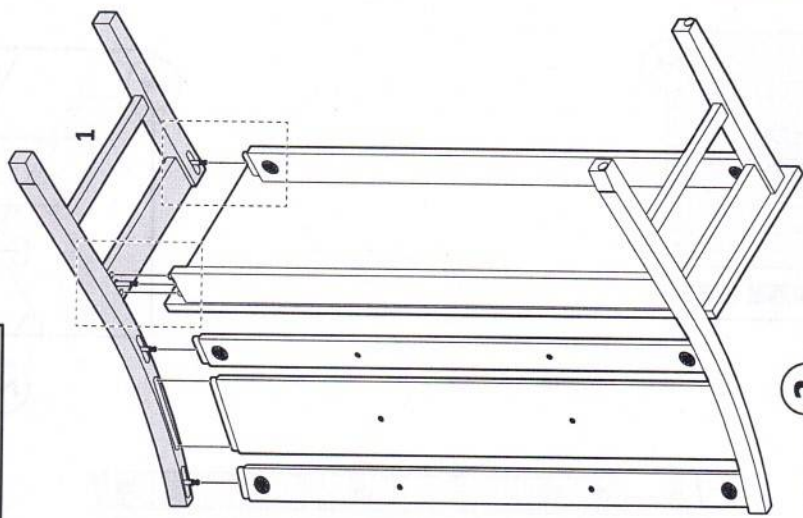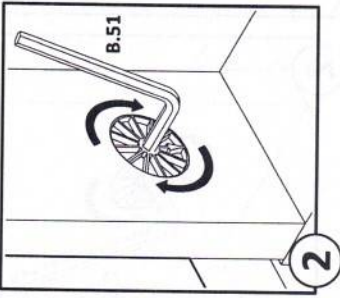

4

7